

How to Replace the Battery

Sargent & Greenleaf Electronic Lock



BEFORE YOU START

Use a brand-new 9V battery. Duracell or Energizer is recommended.
Pliers may be needed.



Locate the battery holder

The drop-down battery compartment is directly beneath the keypad.
Follow the photos and steps below.



- 1 Find the plastic lip at the bottom of the keypad. It releases the battery compartment.



- 2 Put your fingers behind the lip and pull the compartment down. Use pliers if needed.



- 3 Replace the 9V battery with a brand-new Duracell or Energizer battery.



- 4 Reinsert the battery compartment until it is seated securely.



How to Replace the Battery

LG / Lagard / Kaba Mas Electronic Lock



BEFORE YOU START

Use a brand-new 9V battery. Duracell or Energizer is recommended.



- 1 Push up **firmly** with a cupped hand under the base of the lock assembly.



- 2 The lock assembly will pop off its two pins.



- 3 Change the **9V battery** from behind the assembly.

4

- 4 **Reattach the lock:** Place the assembly on its pins and push down to secure it - the opposite of removal.

When to replace it: The battery needs replacement when you hear a series of beeps after entering your combination successfully.

