

How to Change the Combination

on Your Digital Electronic Lock

The 2 most common electronic locks used on ATMs today are shown below; be sure to properly identify which lock you have before attempting to change the combination.

Please contact ATM Money Machine BEFORE attempting to change your combination.

NOTE:

Always remember to **OPEN** the vault door **BEFORE** changing the combination, failure to do so could result in costly repairs to the vault door should an error occur while modifying the combination.



Changing SG Lock Combinations

- ① **2,2,*** (Change Combo Command)
- ② Current **6-Digit** Combo followed by **#**
- ③ New **6-Digit** Combo followed by **#**
- ④ Repeat new **6-Digit** Combo followed by **#**

Your combination has now been changed.
Test the new combo 2 times before closing the vault and locking.

Factory default code is: **1,2,3,4,5,6,#**



Changing LG/Kaba Mas) Lock Combinations

- ① **0,0,0,0,0,0** (Change Combo Command)
- ② Current **6-Digit** Combo
- ③ New **6-Digit** Combo
- ④ Repeat new **6-Digit** Combo

Your combination has now been changed.
Test the new combo 2 times before closing the vault and locking.

Factory default code is: **1,2,3,4,5,6**