

How to Load Cash

Hyosung ATM

ADD CASH

1. PRESS “**ENTER, CLEAR, CANCEL. 1, 2, 3**”, IN ORDER.
2. ENTER PASSWORD
3. THEN PRESS “ENTER”

****HERE YOU CAN USE THE “QUICK REPLENISH” FEATURE FROM YOUR MAIN OPERATION PROGRAM SCREEN (#3) AND FOLLOW THOSE PROMPTS INSTEAD OF THE STEPS AFTER THIS****

4. PRESS “**SETTLEMENT**”
5. PRESS “**DAY TOTAL**”, THEN PRESS ENTER, THE RECEIPT WILL PRINT
6. PRESS “**CASSETTE TOTAL**”, THEN PRESS ENTER (ZERO OUT), THE RECEIPT WILL PRINT. THIS RESETS THE BILL COUNT IN YOUR CASSETTE TO “0”.
7. PRESS “**ADD CASH**”
8. PRESS “**CASSETTE #1**”, ENTER THE NUMBER OF BILLS (I.E. 50) THEN PRESS ENTER OR OK, THEN APPLY. THE NUMBER OF BILLS MUST INCLUDE WHAT WAS LEFT IN CASSETTE AS WELL.
9. PRESS “**TRIAL CASSETTE TOTAL**”, THEN PRESS ENTER
10. PRESS “**CANCEL**”
11. PRESS “**CANCEL**”

TO CHECK CASH BALANCES

1. PRESS “**SETTLEMENT**”
2. PRESS “**TRIAL CASSETTE TOTAL**”, PRINT THE RECEIPT, THEN PRESS ENTER
4. PRESS “**CANCEL**”
5. PRESS “**CANCEL**”

*For ATM related questions, to order paper or service requests before 4PM Monday thru Friday, please call ATM Money Machine 609-641-7300

*For ATM related questions or service requests after 4PM Monday thru Friday and Weekends, please call Andrew Sharp 609-437-5329
If After 9pm EST please email all questions to atmmmtech@gmail.com

Hyosung 877-496-7864

